

Thank you for purchasing a SHARP Filter.  
Please read this manual carefully before operating the product.

### Caution

- Do not tear the bag until you use the filters because they are in the plastic bag to maintain their performance of dust collection and deodorization.
- Be sure to unplug the power cord of air purifier from the wall outlet.


### Filter Maintenance

Some odor ingredients absorbed by the filters may become separated and may be discharged through the air outlet and result in additional odor. Depending on the usage environment, especially when the product is used in a condition significantly more severe than household use, this odor may become strong in a shorter period than expected. In this case, clean the Active Carbon Filter. If the odor persists, then the filters are fully expended and it is necessary to purchase the optional replacement filter kit FZ-N25HFU.

## 1 Filter Removal


### 1 Place the unit facing up and remove the Front Panel.

Lift both sides of the bottom of the Front Panel to remove the Front Panel.

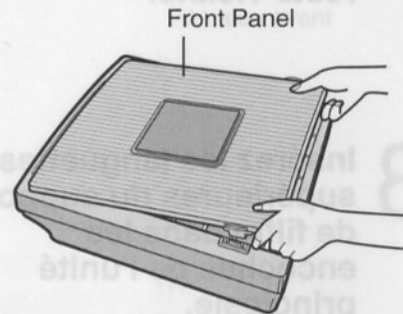


### 2 Remove the Filter Support.

Pinch the two tabs and lift to remove.

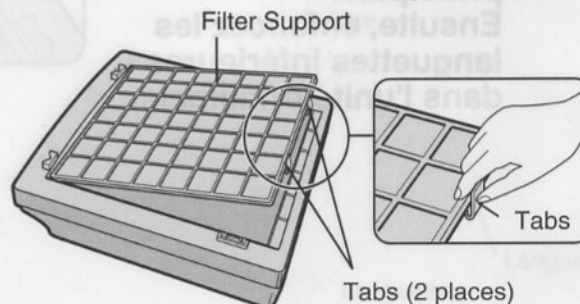


### 3 Remove Active Carbon Filter (black) and True HEPA Filter (blue) which have been used.

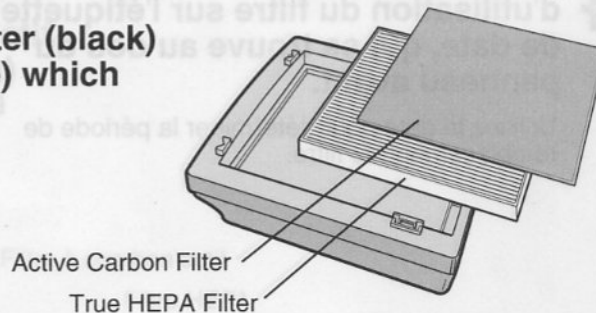


## 2 Filter Installation

- 1 After the True HEPA Filter is removed from the plastic bag, place it in the main unit with the tabs facing up.


Do not install the filter backwards or the unit will not operate properly.

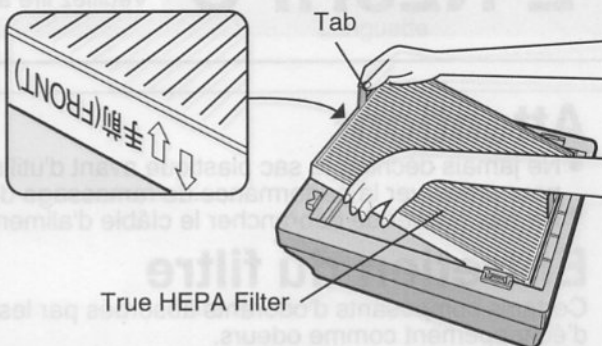

- 2 After removing the Active Carbon Filter from the plastic bag, place it on top of the True HEPA Filter. Make sure that the tab of the True HEPA Filter remains visible.

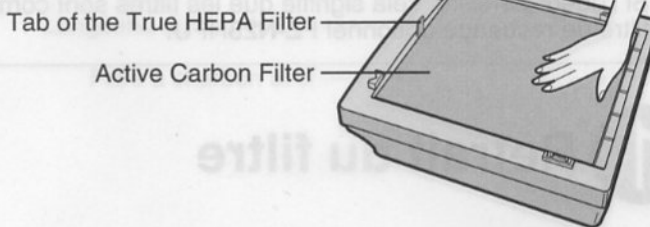

- 3 Insert the upside tabs of the Filter Support into the associated holes of the main unit. Next push the bottom side tabs into the main unit.

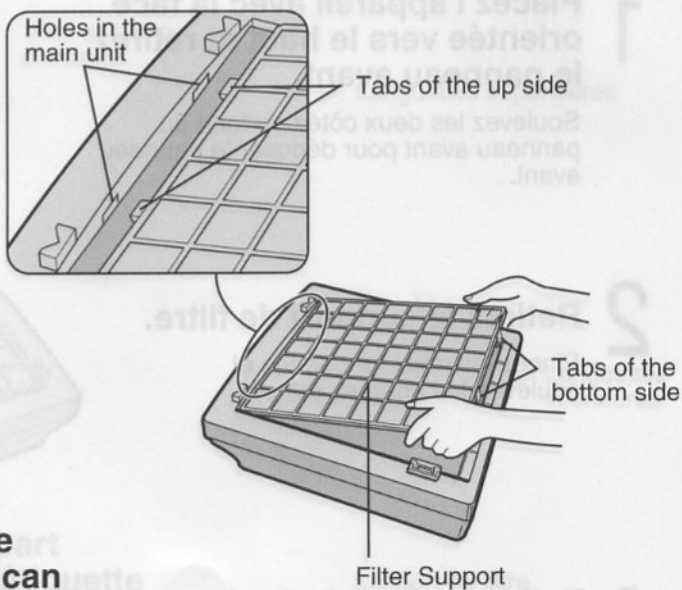

- 4 Fill in the usage start date on the Date Label, which can be found on back side of Front Panel.

Use the date as a guide for the Filter Replacement schedule.

